


Dimensions of opening

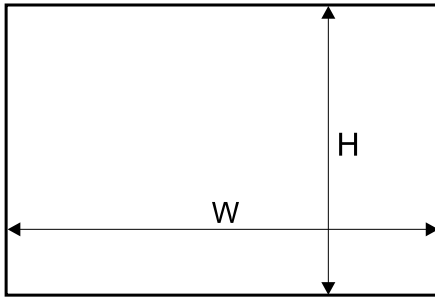

ATTENTION!




Mirror (4 mm) must be used with a safety backing film.

door filling - 10 mm board, 4 mm mirror

door height	- h	$h = H - 32 \text{ mm}$
board height	- hb	$hb = h - 2 \text{ mm}$
door width	- w	$w = (W - 3 \text{ mm} + Z) : N$
board width	- wb	$wb = w - 2 \text{ mm}$
horizontal profile length	- L	$L = w - 48 \text{ mm}$
mirror height	- hm	$hm = hb - 4 \text{ mm}$
mirror width	- wm	$wm = wb - 4 \text{ mm}$


number of doors	- N	2	3
total overlap	- Z	25 mm	50 mm

visual design - 4 wings	
	$w = (W + 72) : 4$
	$w = (W : 2 + 22) : 2$

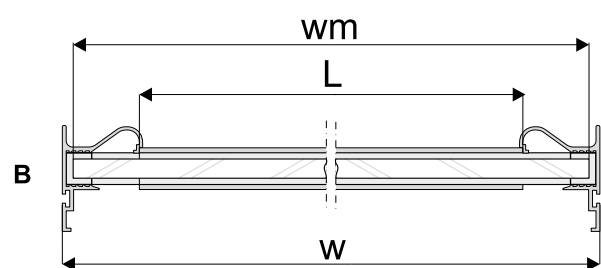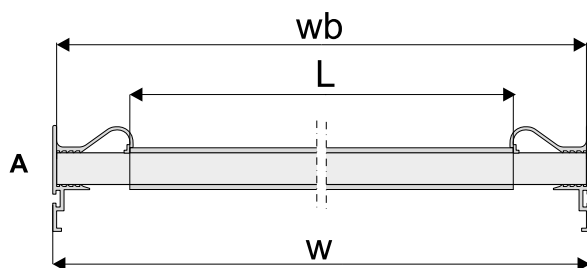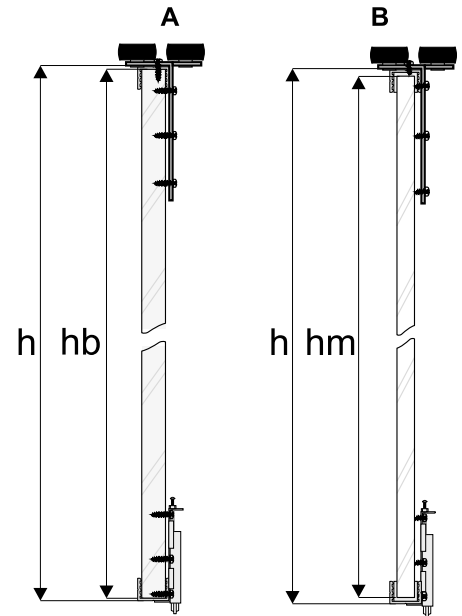


Installation method for fitting 10 mm board (diag. A) and 4 mm mirror or glass (diag. B)

- with handle Ekonomik

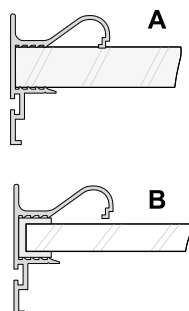

- top carriage

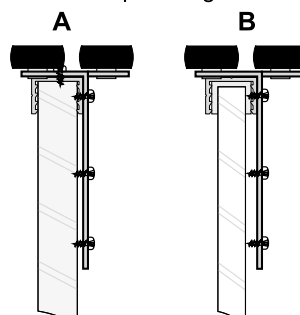

- bottom carriage

