


COMPONENTS

Handle MiniComfort II L: 2.70 m textile door stop (inserted) 4.8 mm x 4 mm # 18 mm	Top track Comfort-Decor L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m 94 mm	Bottom track Comfort L: 1.70 m, 2.35 m, 3.00 m, 4.05 m, 6.00 m 62 mm
Guiding carriage Comfort	Angle section Mini L: 1.70 m, 2.35 m, 3.00 m 11 mm x 17 mm	Bottom carriage WD18C HI-TEC

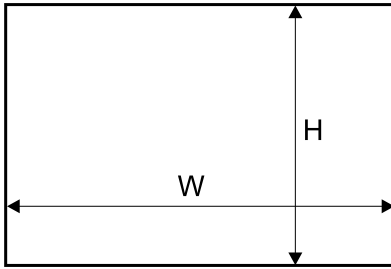

Dimensions of opening




Handle length = door height

door height	- h	$h = H - 42 \text{ mm}$	
door wing height with soft-close fitted	Mini SV25/40/60, SV-25/50	$h = H - 42 \text{ mm}$	
	Top SV60/80, Central SV25/40	$h = H - 44 \text{ mm}$	
board height	- hb	$hb = h - 2 \text{ mm}$	
door width	- w	$w = (W - 3 \text{ mm} + Z) : N$	
board width #18	- wb	$wb = w - 7 \text{ mm}$	
angle section length	- la	this size is determined after door construction	

number of doors	- N	2	3	4	5
total overlap	- Z	20 mm	40 mm	60 mm	80 mm

visual design – 4 wings	
	$w = (W - 3 + 60) : 4$
	$w = (W : 2 + 17) : 2$

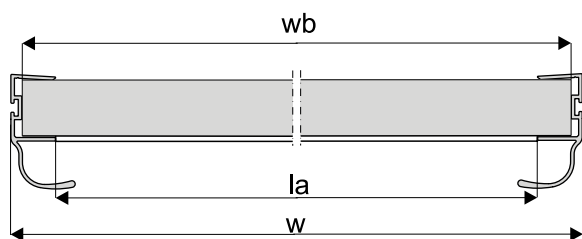


ATTENTION!



Handle profile should be 2 mm longer than board height.

- When fitting handle profiles, do not use assembly adhesive

Installation method for handle and guiding carriage with # 18 mm board (handle Comfort # 18 mm)

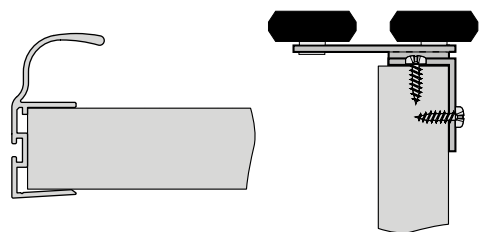

Installation method for angle section Mini 11 mm x 17 mm

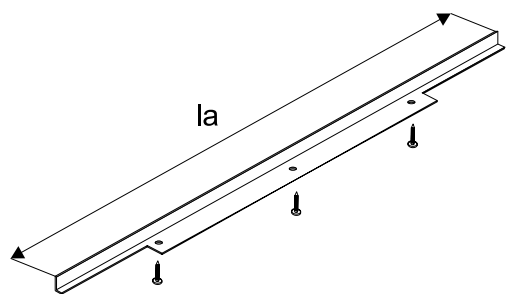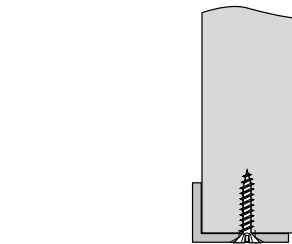

WARNING

SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)